

# Towing Your Vehicle

---

## TOWING YOUR VEHICLE PRECAUTIONS

Use the following guidelines when towing your vehicle. Failure to follow this instruction could result in vehicle damage not covered by the vehicle warranty.

**Note:** *Make sure you properly secure your vehicle to the tow vehicle.*

**Note:** *If you are unsure of the vehicle's configuration, contact an authorized dealer.*

## RECREATIONALLY TOWING YOUR VEHICLE

You cannot recreational tow your vehicle with all wheels on the ground because vehicle or electric drive motor damage could occur. You must recreational tow your vehicle with all four wheels off the ground, such as when using a car-hauling trailer. Otherwise, you cannot recreational tow your vehicle.

## EMERGENCY TOWING

If your vehicle becomes inoperable without access to wheel dollies or a vehicle transport trailer, it can be flat-towed with all wheels on the ground, regardless of the drivetrain, under the following conditions:

- Your vehicle is facing forward for towing in a forward direction.
- You switch Emergency Tow on.

- Maximum speed is 35 mph (56 km/h).
- Maximum distance is 50 mi (80 km).

## Switching Emergency Tow On

1. Properly secure your vehicle to the tow vehicle.
  2. Switch your vehicle on to accessory mode. See **Starting and Powering Off** (page 147).
  3. Apply the parking brake.
  4. Access the vehicle drawer on the touchscreen.
  5. Press **SETTINGS**.
  6. Press **Vehicle**.
  7. Press and hold Emergency Tow until a confirmation message appears on the touchscreen.
  8. Press and hold the brake pedal.
  9. Shift into neutral (N).
- Note:** *A confirmation message appears in the instrument cluster display.*
10. Release the parking brake.
  11. Switch your vehicle off.

## Switching Emergency Tow Off

1. Switch your vehicle on.
2. Press and hold the brake pedal.
3. Shift into park (P). A message displays in the instrument cluster display and park (P) displays in the instrument cluster display and on the shifter.