

# Charging Your Vehicle

Information about public charge stations is available through the in-vehicle screen as well as the FordPass app with pricing, power levels, and real time availability. Rates for charging varies by power level, provider, location, and time of day.

**Note:** When charging your vehicle at a public charge station, follow the directions on the charge station.

## STOPPING CHARGING

1. Push the coupler unlock button on the light ring and remove the charge coupler handle from the vehicle.




2. Close the dust cap for the additional lower connectors.

**Note:** Do not attempt to remove the charge coupler before you unlock it. Do not use any kind of tool to try and remove a locked charge coupler. Doing so can lead to damage to your vehicle and the charge coupler.

**Note:** You cannot unlock the charge coupler handle unless the vehicle remote is near the vehicle.

**Note:** You can also unlock the cord through the vehicle touchscreen. If the cord still does not unlock, please contact roadside assistance.

**Note:** You cannot shift your vehicle out of park (P) until you remove the charge coupler handle.

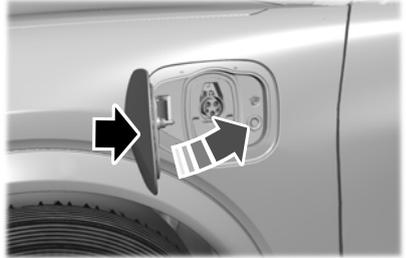


3. Press the center right-hand edge of the charge port door to close.

## Charge Coupler Manual Release

If your vehicle does not unlock the charge coupler, you can manually release it.


Releasing the charge coupler:

1. Switch off your vehicle.
2. Open the hood.
3. Remove the inner luggage compartment shields and locate the low voltage service disconnect. See **Installing and Removing the Luggage Compartment Cover** (page 277).

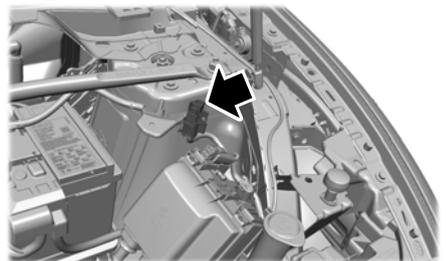


# Charging Your Vehicle


4. Move the low voltage service disconnect to the off position.

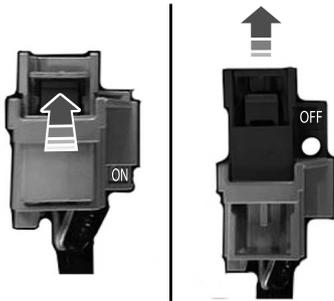

5. Locate the manual release mechanism.

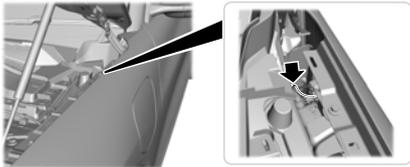

6. Between the gap of the hood and windshield, access the manual release mechanism and pull the pull ring firmly, perpendicularly towards the center of your vehicle. Once pulled, make sure you do not tangle the pull ring cord as it resets on the next charge session.

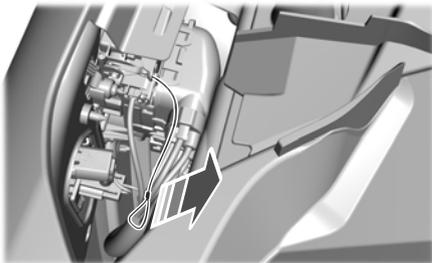

7. Remove the charge coupler from the charge port.

8. Close the low voltage service disconnect.
9. Reinstall the inner luggage compartment shields. See **Installing and Removing the Luggage Compartment Cover** (page 277).
10. Close the hood.

**Note:** The next time you plug in to charge your vehicle, the locking mechanism re-engages and the pull ring resets.

## SETTING THE CHARGING SCHEDULE AND PREFERENCES



You can schedule charging to take advantage of lower-cost electricity rates during off-peak hours if you have signed up for a time of use pricing plan with your utility provider. You can also set an upper charge limit for your battery and a departure time and cabin temperature so your vehicle is ready to go when you are.

Scheduled charging can be set up in the on vehicle display or in the FordPass app.

To view your charge settings:



Access the vehicle drawer on the touchscreen.

1. Press **Settings** on the touchscreen.
2. Press Charge.