


Luggage Compartment

INSTALLING AND REMOVING THE LUGGAGE COMPARTMENT COVER

Remove the luggage compartment covers in the following order:

1. The rear luggage compartment cover.
2. The left-hand luggage compartment cover.
3. The right-hand luggage compartment cover.

Removing the Rear Luggage Compartment Cover

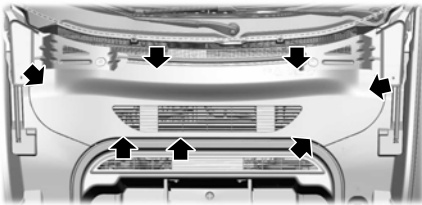

1. Start at the rear edge of the left-hand side.
2. Pull upward at the clip locations shown to release the clips.
3. Remove the cover.
4. To install, reverse the removal procedure.

Removing the Left-Hand Luggage Compartment Cover



1. Start at the rear edge of the left-hand side and work toward the front of the cover.
2. Pull upward at the clip locations shown to release the clips.
3. Remove the cover.
4. To install, reverse the removal procedure.


Luggage Compartment

Removing the Right-Hand Luggage Compartment Cover



1. Start at the rear edge of the right hand-side and work toward the front of the cover.
2. Pull upward at the clip locations shown to release the clips.
3. Remove the cover.
4. To install, reverse the removal procedure.

ADJUSTING THE LUGGAGE COMPARTMENT LOAD FLOOR

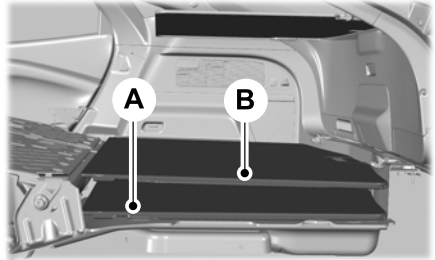

- A Low load floor position.
B High load floor position.

The load floor can be adjusted to a higher position to provide a flat load area when the rear seats are folded.

LUGGAGE COMPARTMENT ANCHOR POINTS

LOCATING THE LUGGAGE COMPARTMENT ANCHOR POINTS

