

Fuel Cell Hyundai Tuscon

Jump Start Procedure



The vehicle's 12-volt battery is located in the cargo area at the left rear corner.
Remove the load floor, then the battery cover.



Connect jump box to the battery
Power up vehicle with the "POWER" button on the dash to the right of the instrument cluster.



When the green "READY" light illuminates in the dash cluster, the jump box can be removed and the vehicle is ready for operation.