



 
Lincoln Passive Entry Back-up Key Slot Location

Model	YS	Slot Location
Aviator	2020U	Under driver's side mirror
Continental2	2017-2020	Under driver's side mirror
Corsair	2020N	Next to driver's door handle
MKC2	2015-2019N	Next to driver's door handle
MKX2	2011-2018	Next to driver's door handle
MKS2	2009-2016	Next to driver's door handle
MKT2	2010-2019	Next to driver's door handle
MKZ2	2013-2020	Next to driver's door handle
Nautilus	2019-2020U	Under rear portion of driver's door handle
Navigator	2013-2017N	Next to driver's door handle
	2018-2020P	Pull out and hold the driver door handle, insert key at the rear of the handle

Aviator

Unlatching the Driver Door with the Key Blade

If your vehicle has no power and the backup power system is turned off, you can manually unlatch the driver door using a key in the position shown.

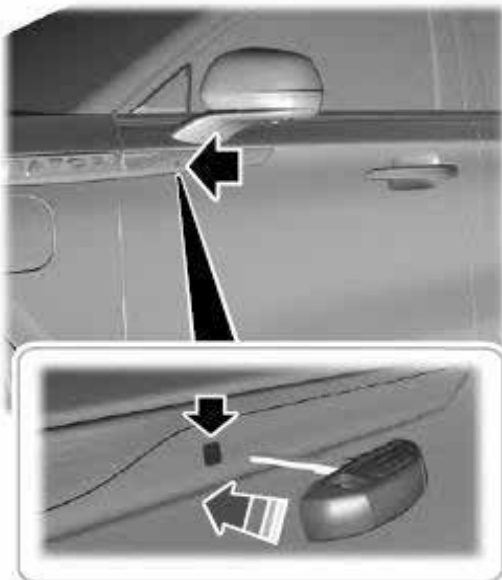


1. Remove the key blade from the transmitter.
2. Insert the key blade into the lock cylinder.
3. Turn the key clockwise to unlatch the driver door.

Note: All other doors remain locked.

Continental2

Unlocking the Driver Door with the Key Blade

 If your vehicle has no power and the backup power system disables, you can manually unlock the driver door using a key in the position shown.

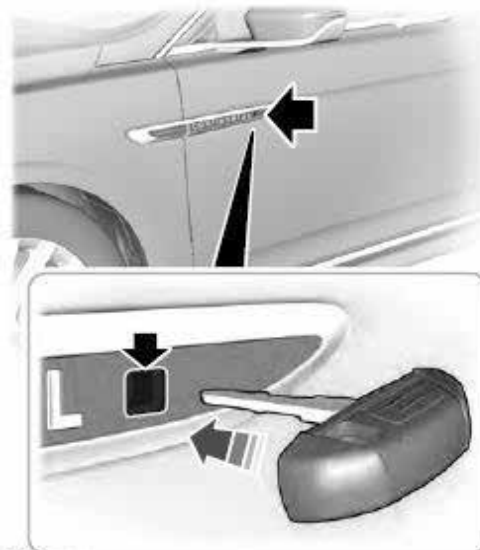

E222424

 
1. Remove the key blade from the transmitter.
2. Insert the key blade into the lock cylinder.
3. Turn the key clockwise to unlock the driver door.

Note: All other doors remain locked.

Corsair 2020+

Locking and Unlocking the Doors with the Key Blade

If the central locking function does not operate, lock the doors using the key blade in the door handle lock cylinder.

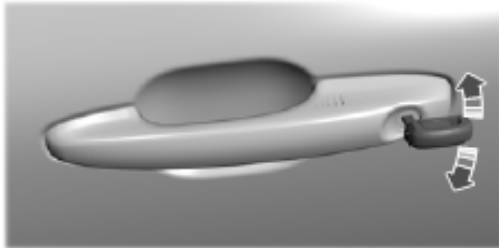

Unlocking with the Key Blade

Insert the key blade into the driver door handle lock cylinder, turn the key down toward the rear of your vehicle to unlock.

MKC 2015-19



E176224

Slide the release on the back of the remote control and pivot the cover off to access the key blade.

At the Front Doors

Pull a front exterior door handle to unlock and open the door. The unlock sensor is on the back of the handle. Make sure not to touch the lock sensor area on the front of the handle.

 


E146044

MKX

2011-2015

The IA key also contains a removable mechanical key blade that can be used to unlock the driver door. To release the mechanical key blade, slide the release on the back of the transmitter and pull the blade out.

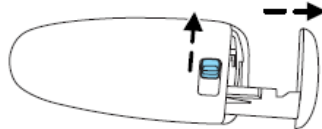

Your IA keys are programmed to your vehicle. You cannot enter or start your vehicle with an unprogrammed key. If you lose one or both of your IA keys, replacements are available from your authorized dealer. For more information on programming replacement IA keys, refer to the *SecuriLock® passive anti-theft system* section in this chapter.



6210478

 
2016-2018



E176224

Slide the release on the back of the remote control and pivot the cover off to access the key blade.

MKT

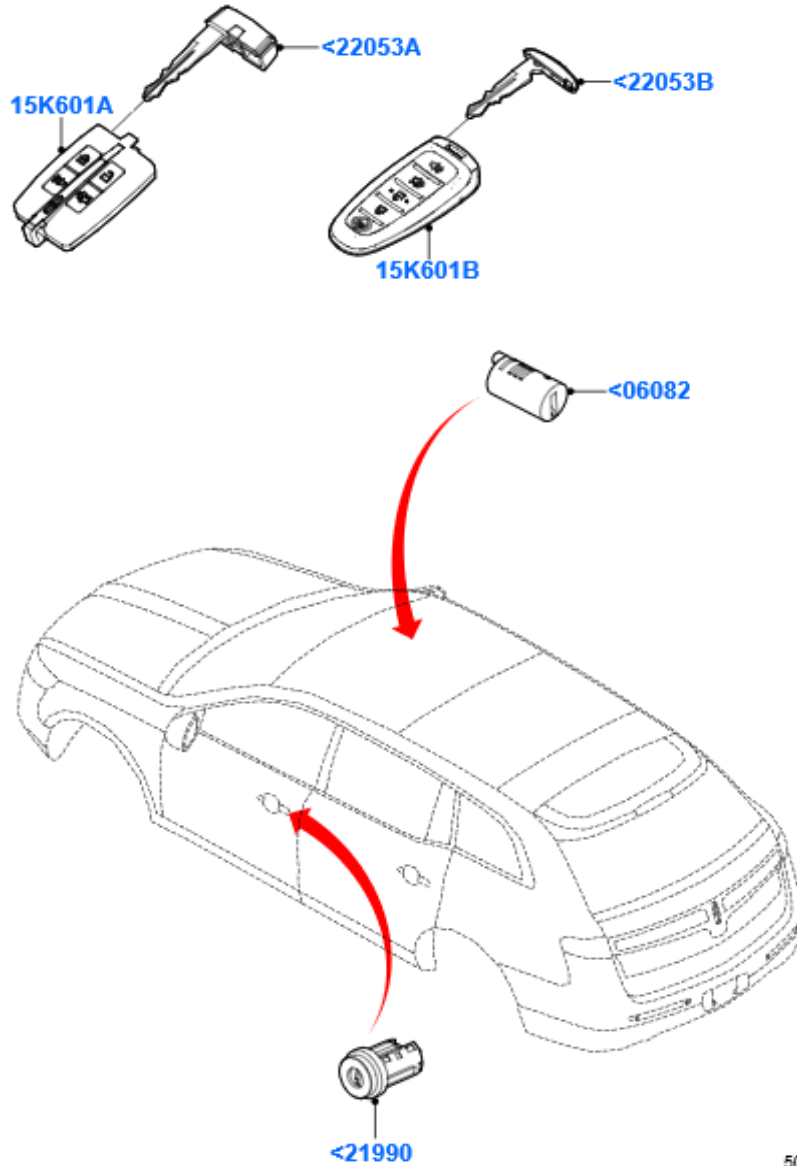

MKZ



Nautilus**Locking and Unlocking the Doors with the Key Blade****Locking the Doors**

E151056

If the central locking function does not operate, lock the doors individually using the key in the position shown.