

2021 Alfa Romeo Giulia


Tire Sealant Cartridge Replacement



Note: Only use original cartridges, which can be purchased at an authorized dealer.

PROCEED AS FOLLOWS:

- ① Remove the sealant cartridge by pushing the release button located on the side of the compressor.
- ② Insert the new sealant cartridge by pushing downward firmly.

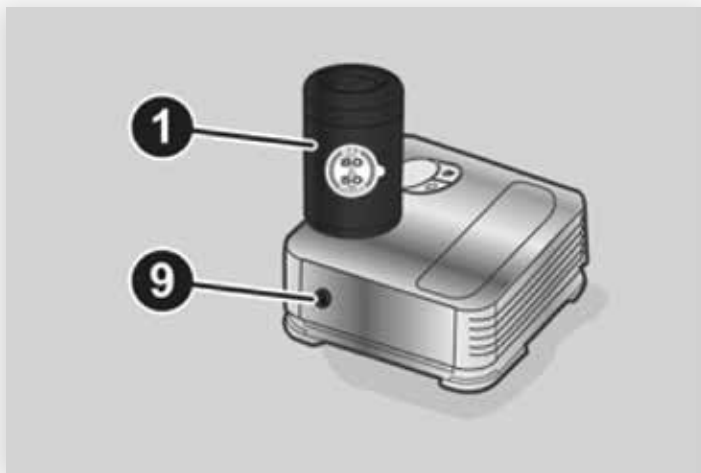

Sealant Cartridge Replacement

1. Sealant Cartridge

9. Release Button