

2021 Ram Promaster

Preparations for Jacking




- 1 Park the vehicle on a firm, level surface. Avoid ice or slippery areas.

WARNING:

Do not attempt to change a tire on the side of the vehicle close to moving traffic. Pull far enough off the road to avoid being hit when operating the jack or changing the wheel.

- 2 Turn on the Hazard Warning Flashers.
- 3 Apply the parking brake firmly.
- 4 Place the transmission in PARK (P) or REVERSE (R) for manual transmission.
- 5 Turn the ignition OFF.
- 6 Block both the front and rear of the wheel diagonally opposite the jacking position. For example, if the driver's front wheel is being changed, block the passenger's rear wheel.

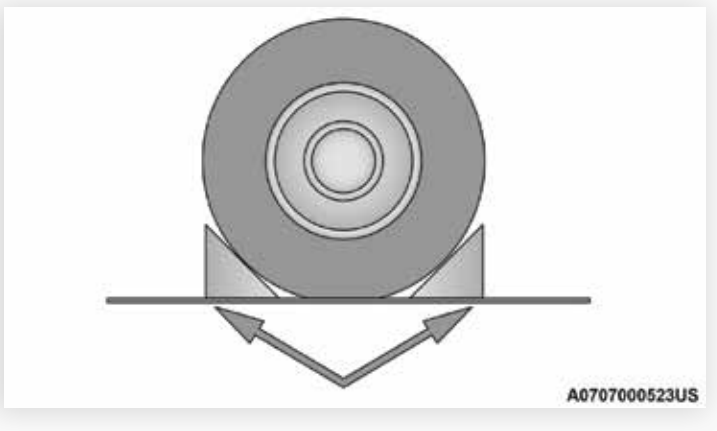

Wheel Blocked

Note: Passengers should not remain in the vehicle when the vehicle is being lifted or raised.