




## 2021 Ram Promaster

### Preparations for Jump Start



The vehicle's jump starting remote posts are located under the hood, in the engine compartment on the driver's side. The Remote Positive (+) Post is covered with a protective cap located on the side of the Front Power Distribution Center. The Remote Negative (-) Post is located on the core support closest to the front of the vehicle.

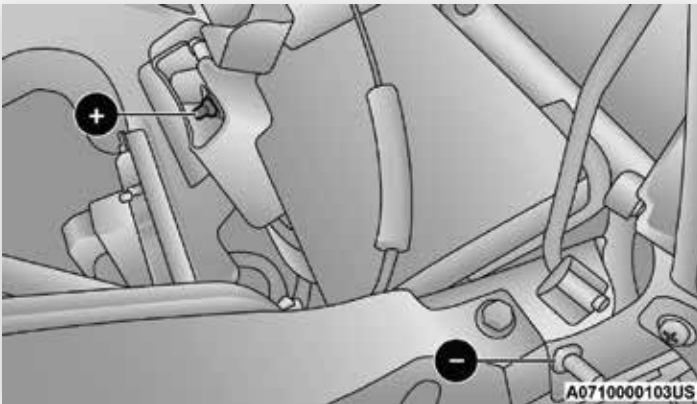

Jump Starting Locations

Remote Positive (+) Post  
Remote Negative (-) Post

#### **WARNING:**

- Take care to avoid the radiator cooling fan whenever the hood is raised. It can start anytime the ignition switch is ON. You can be injured by moving fan blades.
- Remove any metal jewelry such as rings, watch bands and bracelets that could make an inadvertent electrical contact. You could be seriously injured.
- Batteries contain sulfuric acid that can burn your skin or eyes and generate hydrogen gas which is flammable and explosive. Keep open flames or sparks away from the battery.

#### **SEE BELOW STEPS TO PREPARE FOR JUMP STARTING:**

- 1 Apply the parking brake, shift the automatic transmission into PARK (P) and turn the ignition to the OFF position.
- 2 Turn off the heater, radio, and all electrical accessories.
- 3 Pull upward and remove the protective cover over the remote positive (+) battery post.
- 4 If using another vehicle to jump start the battery, park the vehicle within the jumper cables reach, apply the parking brake and make sure the ignition is OFF.

#### **WARNING:**

Do not allow vehicles to touch each other as this could establish a ground connection and personal injury could result.