




2021 Ram Promaster

Tire Service Kit Components and Operation

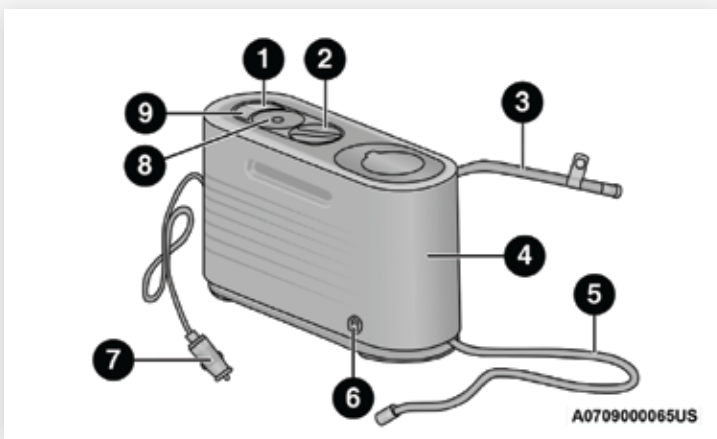

Tire Service Kit Components

1. Power Button
2. Mode Select Knob
3. Sealant Hose (Clear)
4. Sealant Bottle
5. Air Pump Hose (Black)
6. Sealant Bottle Release Button
7. Power Plug
8. Pressure Gauge
9. Deflation Button

Small punctures up to 1/4 inch (6 mm) in the tire tread can be sealed with Tire Service Kit. Foreign objects (e.g., screws or nails) should not be removed from the tire. Tire Service Kit can be used in outside temperatures down to approximately -4°F (-20°C).

This kit will provide a temporary tire seal, allowing you to drive your vehicle up to 100 miles (160 km) with a maximum speed of 50 mph (80 km/h).

The Tire Service Kit is located under the passenger seat or the driver side door.