



# Polestar


## 12v Disconnect



- 1) Disconnect charging cables and lock vehicle
- 2) Wait at least 7 minutes before continuing
- 3) Without sitting in the seat, release frunk
- 4) If you must sit in the seat, lock vehicle and wait 7 minutes before continuing

- 5) Locate the two pins highlighted
- 6) Note that there are 4 pins in this area, we are using the two in the trough

- 7) With a screwdriver push in the center circle (1st Picture) of the clips until a click is heard and felt (2nd Picture)

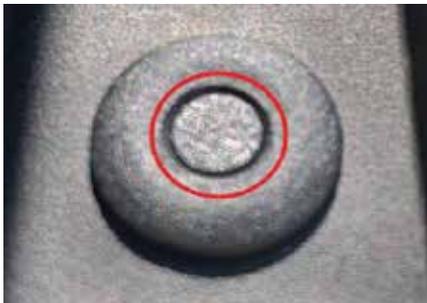

- 8) Remove the two clips (may be necessary to use a screwdriver to pry up) and set them in the frunk

- 9) Lift the trim around the hood strut. Note that there are additional clips under the trim (see next slide)

Note that there are several clips that may need to be released while lifting





- 10) Lift the panel far enough to expose the battery.  
The whole panel does not need to be freed




- 11) Lift the panel far enough to expose the battery.  
The whole panel does not need to be freed




- 12) With a 10mm wrench, loosen the purple nut pictured  
– Nut does not need to be removed)

- Lift up on the entire sensor and terminal  
– The yellow assembly should lift free of the battery  
post

- 13) Wait 10 seconds  
- During this time it may help to open the door and  
make sure no electronics are activated  
  
- If electronics are active, reconnect the terminal  
(do not tighten) and wait 10 more minutes

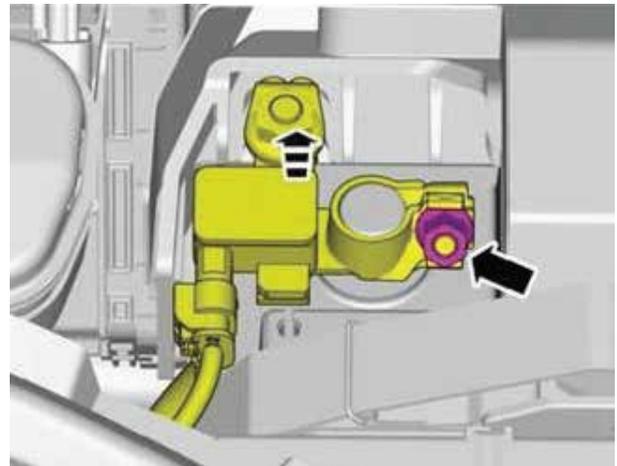

- 14) Reseat the terminal and tighten the purple nut  
to 6Nm  
– 6Nm will lightly snug but not tight if performing  
without a torque wrench

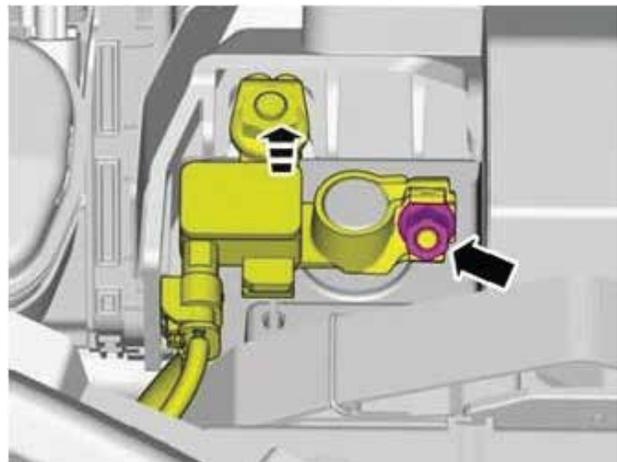



15) Lay the trim back down around the hood strut



16) Press down on the trim so that all of the fasteners have seated. The trim may need to be shifted around slightly so that all fasteners align with their respective holes



17) Ensure the panel is fully seated



18) Reset the two black clips so that the pins above the black circle (as pictured)



19) Install the two pins in their holes (highlighted)

20) Press down on the center circle (highlighted) so that it is flush with the outer circle.



21) Start the vehicle. Note that this message may be displayed for two minutes before start is allowed. Vehicle will inform you when it can be put in gear.

