

# 2017 Audi TT - All Variants

## Roadside and Towing Information



### Roadside Information



The spare tire and the tool kit are located under the load floor.



The tool kit is located in the back of the spare tire.



Jump start

---

## Towing Information



**FRONT:** Press the top left corner of the front eyelet cover.



**REAR:** Press the bottom of the rear eyelet cover to remove.

