

2024 Aston Martin DB12

Emergency Key Missing - Apply External Power




If the vehicle battery is discharged and the mechanical blade is not present, it is possible to unlock the remote central locking by applying power to the vehicle externally.



Attach the battery conditioner by guiding it up between the boot and the body (it will attach itself properly with the help from the magnet).

OR

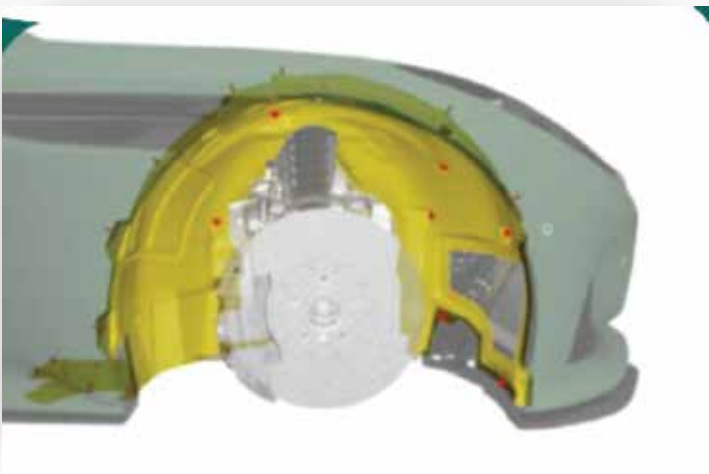

Loosen the front right wheel bolts before the vehicle is raised and the road wheel is removed. Make sure that all safety precautions are followed when the vehicle is jacked up and an axle stand is used to support the vehicle. Remove the wheel housing liner secured with Torx fasteners.

Locate the battery cable connector in the wheel housing and apply power from an external battery boost pack.