


2024 Aston Martin DB12

Wheel Bolt Sequence and Torque Settings

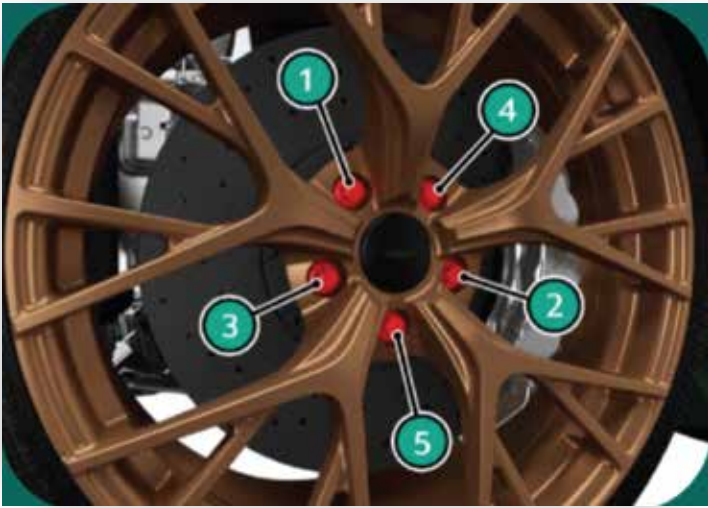

Wheel Bolt Torque

⚠ Caution: You must use an applicable plastic-sleeved socket to remove, install, and tighten the wheel bolts. This will help prevent damage to the surface of the wheel.

All wheel bolts must be tightened in two stages:

- + Tighten every second wheel bolt (in the order shown) to 70 Nm (52 lb/ft) until all five bolts are tightened.
If a locking wheel bolt is installed, this should be installed last.
- + Tighten every second wheel bolt (in the order shown) to 150 Nm (111 lb/ft) until all five bolts are tightened.