



2021 Audi e-tron quattro

Towing & Free Roll

Prior to activating "Free-Roll" make all connections to Tow Vehicle to prevent roll away.



The Tool Kit can be found under the cargo floor of the front storage compartment, under "Hood"



Tow Eyelet is in the Tool Kit



Press on top left corner to remove Front Tow Eyelet Cover



Press at bottom to remove Rear Tow Eyelet Cover

If vehicle is equipped with factory trailer hitch Tow Eyelet provision in rear bumper is not available




Tow Eyelet has Left Hand thread cut. Screw in Tow Eyelet to shoulder until it's seated in bumper beam



Roadside Tip Sheet / Guide de reference

Prior to activating "Free-Roll" make all connections to Tow Vehicle to prevent roll away.

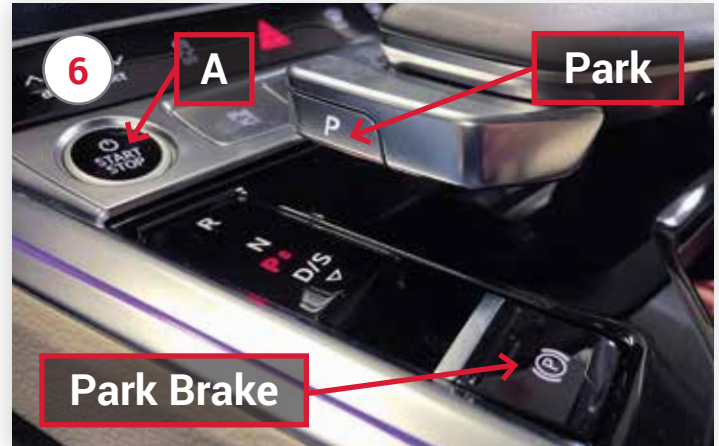

Enter vehicle with Key Fob present, depress foot brake, turn on vehicle with Start/Stop button (A)

Disengage Park Brake, Shift to Neutral (N) by sliding shifter forward



The dash cluster will indicate Neutral (N)



To raise vehicle prior to loading press "Drive Select" Up button



In Infotainment screen select highest setting "Offroad"

To turn off Roll Function place vehicle back in Park by pressing Park Button on shifter.

Select Park and set Park Brake during Transport

Upon delivery Return Tow Eyelet to tool kit in storage compartment and reinstall Tow Eyelet Cover