

2021 Ram Promaster

Gear Selector Override - 6-Speed Transmission


If a malfunction occurs and the gear selector cannot be moved out of the PARK (P) position, you can use the following procedure to temporarily move the gear selector.

- ① Turn the engine OFF.
- ② Firmly apply the parking brake.
- ③ Using a small screwdriver or similar tool, remove the gear selector override access cover which is located below the gear selector.



Gear Selector Release Cover

- ④ Press and maintain firm pressure on the brake pedal.
- ⑤ Insert the screwdriver or similar tool into the access port, and push and hold the override release lever forward.

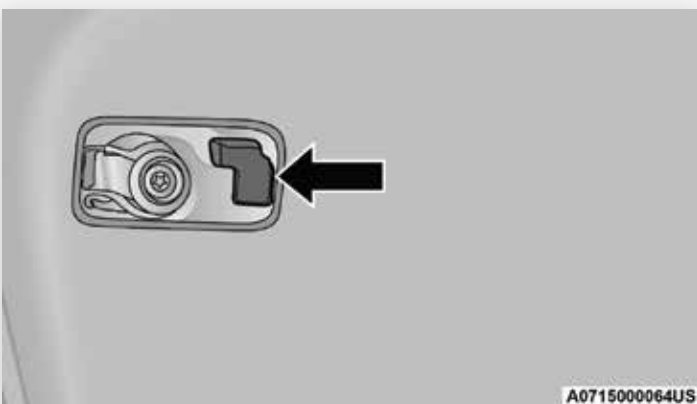

Release Lever

- ⑥ Move the gear selector to the NEUTRAL (N) position.
- ⑦ The vehicle may then be started in NEUTRAL.
- ⑧ Reinstall the gear selector override access cover.