

2023 Jeep Grand Cherokee 4XE

Manual Park Release


WARNING:

You should be seated in the driver's seat with your foot firmly placed on the brake pedal to maintain control of the vehicle before activating the Manual Park Release. If possible, you should apply the parking brake. Activating the Manual Park Release will allow your vehicle to roll away if it is not secured or properly connected to a tow vehicle. Activating the Manual Park Release on an unsecured vehicle could lead to serious injury or death for those in or around the vehicle.

To move the vehicle in cases where the transmission will not shift out of PARK (P) (such as a depleted battery), a Manual Park Release is available.

To activate the Manual Park Release, see the following steps:


- Apply firm pressure to the brake pedal while seated in the driver's seat.
- Apply the Electric Park Brake (EPB), if possible.
- Using a flathead screwdriver or similar tool, remove the Manual Park Release access cover, which is to the lower left of the steering column.

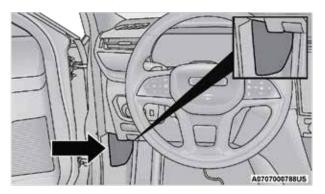

Manual Park Release Access Cover


Note:

Insert the flathead screwdriver or similar tool in the lower notch of the access cover and gently rotate clockwise to remove.

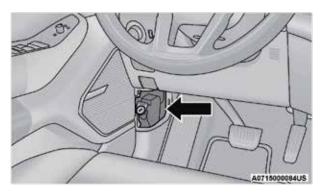

Manual Park Release Location

4. Unlock the crange lock plug by furning it a guarter furn counter dockware.

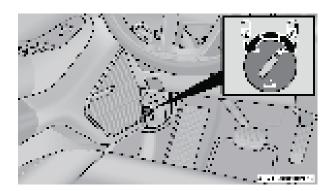

Locked — Unlocked Position

5. Pull the lock glug out as to said will go, then release it. The transmission should now be in NEUTRAL (N), allowing the vehicle to be moved.

Note

When the level is tocked in the released position, the lock plug and letter will remain outside of the kimpanet and the access cover cannot be remainabled.

8. Release the EPB only when the vehicle is seen elyconnected to a low vehicle .

ic Reset The Menuel Perk Release.

-). Apply is migrocaute to the brake godel while smalled in the diwer's small.
- 2. Pull the lock glug out again, then released.
- 9. Allow the father to retract with the level back to its original goalion .
- 4. Verify that the transmission is in PARK (P).
- 5. Contem that the letter has retracted fully then fromly guals the orange tock plug back to the locking position within the housing. Remaist the access cover. If the access cover cannot be remaisting regard steps I through 4 .